 



- 1 Main battery 12 V
- 2 Additional battery 12 V
- 3 Hydrogen tank
- 4 High-voltage battery

Note

The alternative high-voltage disconnect device is only to be operated when the high-voltage disconnect device in the engine compartment is inaccessible.



 Airbag




Gas generator



Seat belt tensioner



 Restraint systems control unit



Gas-filled strut



Pedestrian protection



Fuel tank



12 V Battery



High-voltage battery



High-voltage components



High-voltage disconnect device




Alternative high-voltage disconnect device



Mercedes-Benz


GLC F-CELL
SUV, model 253
as of 2017

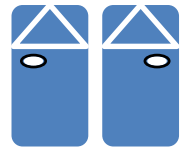

High-voltage system

All high-voltage components are marked with an appropriate warning label.

High-voltage lines are orange.

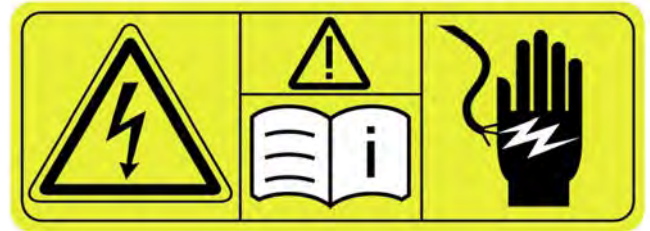

High-voltage warning label

Hydrogen system


Hydrogen components are marked with an appropriate warning label, as are the two hydrogen lines between the fuel cell and the anode module.



Hydrogen warning label

High-voltage disconnect device

The high-voltage disconnect device is located on the right side of the engine compartment.

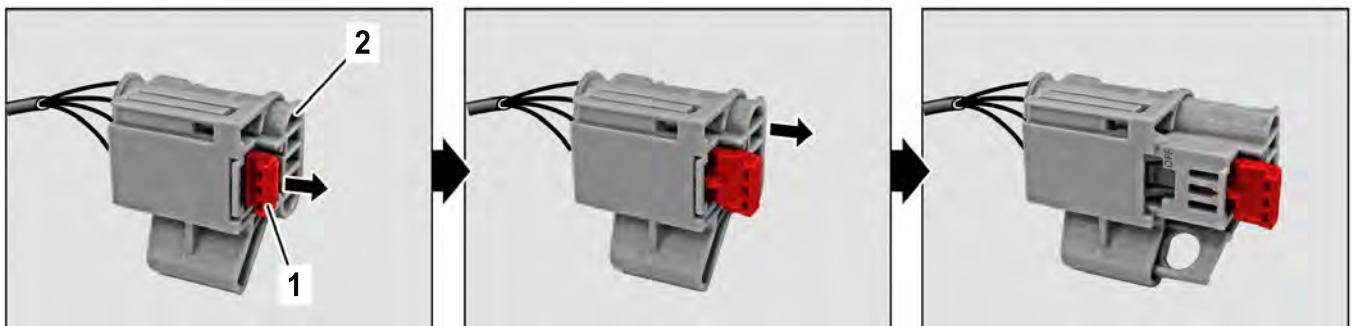


Operate release (1) / Pull out switch (2)



Mercedes-Benz

GLC F-CELL
SUV, model 253
as of 2017

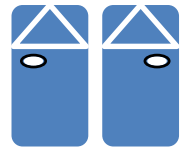


Alternative high-voltage disconnect device:

The alternative high-voltage disconnect device is located behind the cover in the cockpit. It is marked with an information label.

Note

The alternative high-voltage disconnect device is only to be operated when the high-voltage disconnect device in the engine compartment is inaccessible.

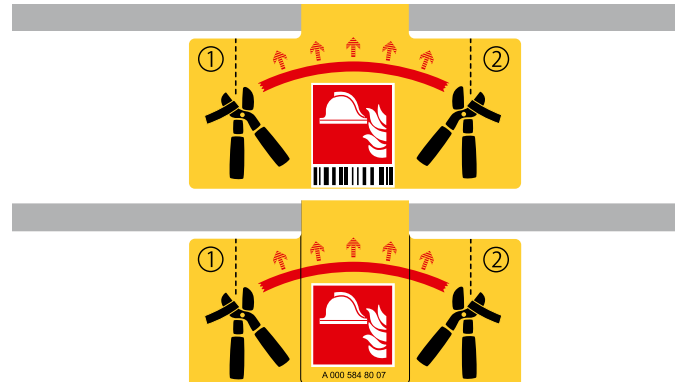

Remove cover (1) of fuse box / Cut line at marked location (2)