


S-Class HYBRID PLUS (plug-in hybrid) Sedan model 222 as of 2014









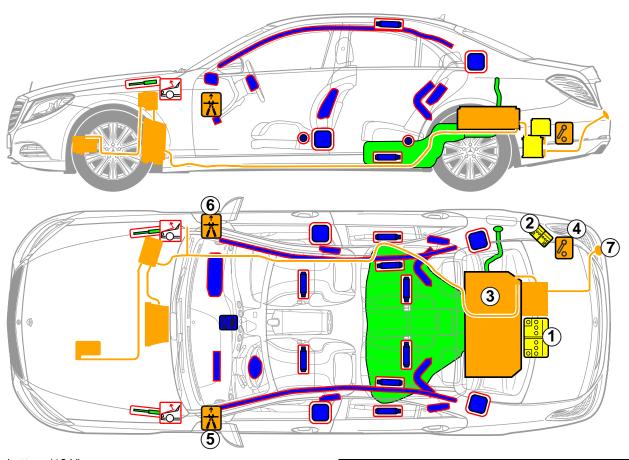

- 1 Main battery (12 V)
- 2 Additional battery (12 V)
- 3 High-voltage battery
- 4 High-voltage disconnect device
- 5 Alternative high-voltage disconnect device, left-hand drive
- 6 Alternative high-voltage disconnect device, right-hand drive
- 7 HV charge socket



Airbag



Gas generator



Seat belt tensioner

Note



The alternative high-voltage disconnect device is

connect device in the trunk is not possible.

only to be used when access to the high-voltage dis-

Beltbag



Restraint systems control unit



Gas-filled strut



Pedestrian protection



Fuel tank



12 V Battery



High-voltage battery



High-voltage components



High-voltage disconnect device




Alternative highvoltage disconnect device



High-voltage disconnect device

The high-voltage disconnect device is located on the right at the rear under the cover of the trunk recess. The recess lining is pulled out of the trunk by the tab below the trunk sill in the center of the vehicle.

The tab is marked with the symbol [1].

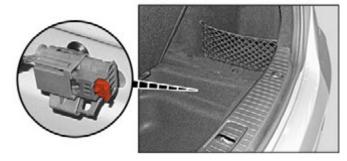

High-voltage disconnect device in trunk

 


Pull release (1) / Pull out switch (2)

Alternative high-voltage disconnect device
The alternative high-voltage disconnect device is located under the cover of the fuse box on the left of the cockpit. It is marked with an information label.



The alternative high-voltage disconnect device is only to be used when access to the high-voltage disconnect device in the trunk is not possible.





Remove cover (1) of fuse box / Cut line at marked location (2)

S-Class HYBRID PLUS (plug-in hybrid) Sedan model 222 as of 2014



Vehicle identification

