

Airbag



Gas generator



Seat belt pretensioner



SRS control unit



Gas strut / Pre-loaded spring



Low-voltage battery




Diesel Fuel tank

**Note:** Please see our [emergency response guide](#) for more information





## 1. Identification / recognition

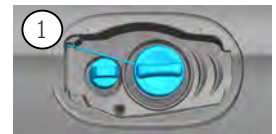


## 2. Immobilisation / stabilisation / lifting

### Parking brake

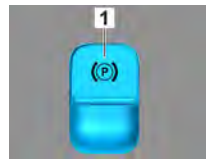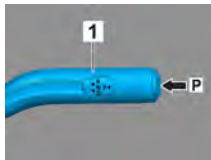

Press the P switch on the gear selector (1). The parking brake is automatically activated. Electric parking brake (1)

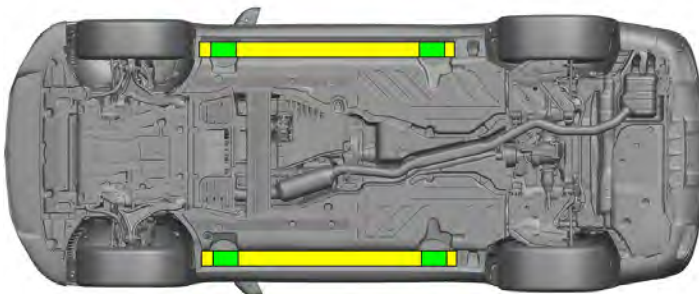

Suitable lifting points



Suitable stabilisation points on the side




Additional deformation of the door sills and the underbody (e.g. through support with hydraulic equipment) must be avoided during the rescue.

## 3. Disable direct hazards / safety regulations

### Switch off the ignition:

1. Press the START/STOP button without actuating the service brake.
2. Keep the electronic vehicle key at a distance of at least 5 m.



### Disconnecting the 12/48 V battery

1. Remove the cover from the 12/48-volt battery.
2. Disconnect the negative cable of the 12/48-volt battery at the screw connection and secure it against unintentional contact.




The passive safety systems (airbags and seat belt pretensioners) are deactivated.




#### 4. Access to the occupants


When freeing the occupants, the components of the restraint systems (in particular pyrotechnic elements) must be taken into consideration in accordance with the information on page 1.

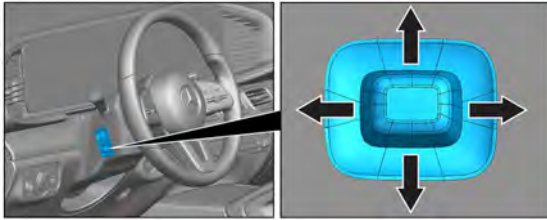

Steering wheel adjustment

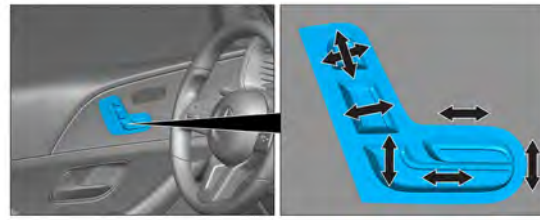

Seat adjustment (electric)

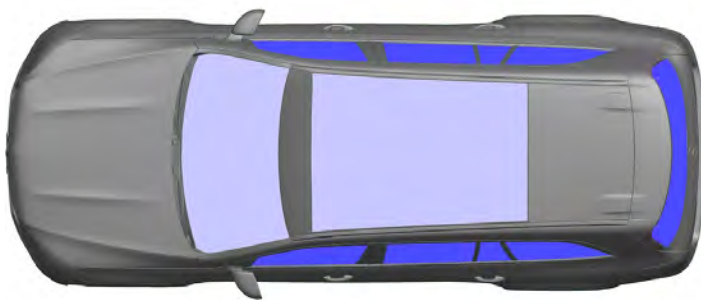

VSG: Laminated safety glass

ESG: Tempered glass

#### 5. Stored energy / liquids / gases / solids



#### 6. In case of fire




Use large volumes of water (H<sub>2</sub>O) to extinguish a vehicle fire.

#### 7. In case of submersion

There is no risk of voltage in the bodywork. After recovery of the vehicle:

1. Allow the water to drain out of the interior.
2. Commence deactivation of the 12 V/48 V electrical system (see Section 3).

#### 8. Towing / transportation / storage

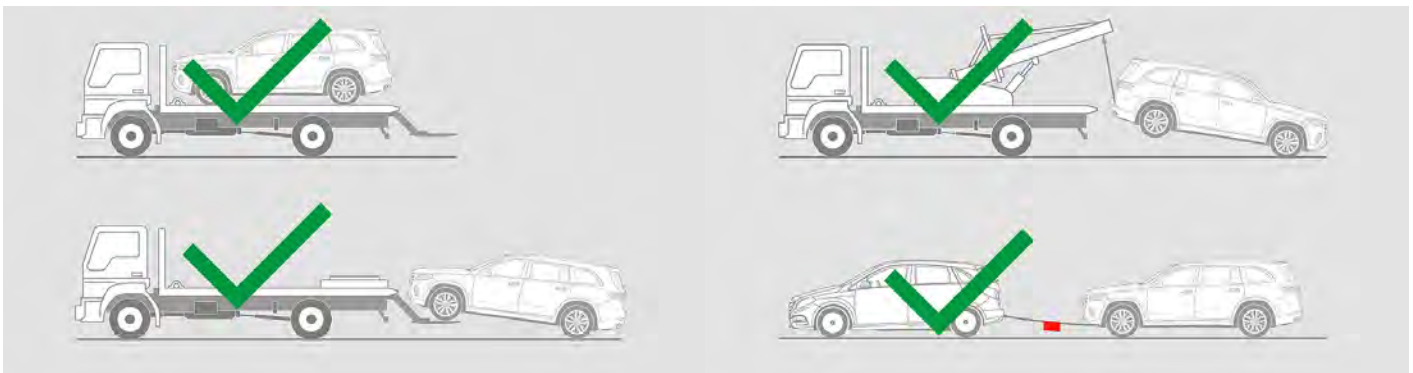



## 9. Important additional information

You can find more information in the [Guidelines for car towing services](#).

## 10. Explanation of pictograms used



Vehicle on fuel of li-  
quid group 1



General warning sign



Flammable



Hazardous to the hu-  
man health



Corrosives



Acute toxicity



Use water to extin-  
guish the fire



Use dry foam to extin-  
guish the fire



Use wet foam to ex-  
tinguish the fire



Remove smart key