



1. Identification / recognition

Logo "TGI"



Gas filler neck




2. Immobilisation / stabilisation / lifting

Immobilize the vehicle

Apply the parking brake



Lifting points

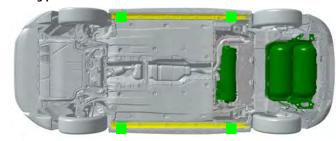

Suitable lifting points

Gas tanks

Turn off the ignition

Press the "START-STOP" button in the center console





Instead of a radio key, it is also possible to use a key card or smartphone app.

3. Disable direct hazards / safety regulations

Disconnect the 12-volt battery



In the engine compartment
Disconnect the earth connection (-)


Manually shut off gas tanks



Remove tank covers



Localise the gas tank shut-off valves on the right vehicle side

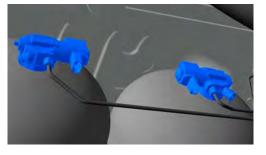


Turn the shut-off valve clockwise to the stop with a size 5 open-jaw or ring spanner

 Additional information
 Document number
 Version
 Page

 rds_vwv_382_002_en
 06/2022 (03)
 2 of 4



4. Access to the occupants

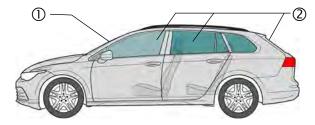

Glass types:

- ① Laminated safety glass
- ② Toughened safety glass

5. Stored energy / liquids / gases / solids











max. 260 bar









91











12 V

6. In case of fire

















The gas tank (ride side vehicle) excess pressure relief mechanisms open at approx. 110°C (blow-off noise). The tanks are emptied after approx. 90 seconds. Wear suitable safety equipment.



7. In case of submersion

Allow the water to drain off after the vehicle has been recovered. If gas escapes, close the tank shutoff valves (see Section 3).

8. Towing / transportation / storage

Make sure that the gas tanks are not damaged when towing or parking the vehicle. If gas escapes, close the tank shut-off valves (see Section 3).



Do not tow a vehicle that has been involved in an accident on its drive axles.



9. Important additional information

 Additional information
 Document number
 Version
 Page

 rds_vwv_382_002_en
 06/2022 (03)
 3 of 4



10. Explanation of pictograms used

















Flammable

Explosive

Corrosives

Hazards to the human health

Environmental hazard

Gases under pressure

CNG-Gasoline vehicle

Gas line (generic)















Remove smart key

Use wet foam to extinguish the fire

Use ABC powder to extinguish the fire

Use thermal

Release the bonnet

Additional information Document number Version Page rds_vwv_382_002_en 06/2022 (03) 4 of 4